

I'm not robot



Sony wega projection tv manual

Sony wega tv color problems.

Before using the projection TV, read this manual thoroughly and keep it for future reference. To properly use your Sony projection TV and connected equipment, place them next to each other so you can control both devices simultaneously using the TV's remote (page 17). The Twin Pictures feature allows you to display two different TV programs or video inputs at once. Press the VIDEO button to toggle this feature on or off. You can also view multiple TV programs by pressing PROG INDEX, which displays a scrolling list of tuned channels for easy selection. The current program is shown on the left side of the screen, and the first tuned program is displayed on the bottom right before freezing. To enjoy stereo or bilingual sound, press the A/B button while receiving NICAM or A2 programs. This setting will be displayed on-screen with options for Mono, Stereo, and Regular sound. The WEGA GATE navigator provides access to preset TV channels, connected external inputs, and the Settings menu (see pages 7 and 14). You can change your projection TV's settings by selecting "Settings" in the WEGA GATE menu. This menu allows you to adjust picture quality, channel setup, and sound settings. Setting up Multi-Picture Display: To view two pictures simultaneously, navigate to the "Multi Picture" menu, then press WEGA GATE and select the desired setting. This feature allows for program indexing and twin screen swapping. Changing Channel Setup: The "Channel Setup" menu enables automatic or manual channel presetting, TV system selection, and channel sorting or editing. Access this menu by pressing WEGA GATE, then selecting "Settings" and choosing "Channel Setup". Presetting Channels Manually: To manually preset channels, select the "Manual Program" option, then choose the desired program number to which you want to assign a channel. Setup Options: The "Setup" menu allows for menu language adjustment, convergence tweaking, WEGA Theatre Mode setup, video game picture setting, equipment labeling, color system selection, and power consumption reduction. You can also reset your projection TV to its factory settings or select the S video input mode. Labeling Connected Equipment: To label connected devices, press V or v to select the desired input, then choose from various label options such as "Video 1" or "Game". Connecting Optional Components: For connecting optional components, use the video input terminal, component video cable, or amplifier. Ensure proper connections and settings for optimal performance. Troubleshooting: If you experience issues with your projection TV's audio system, display the "Channel Setup" menu and select "Manual Program" to reset the channel presetting (see page 26). A display technology featuring a horizontal inline design. Utilizing picture tube monochrome tubes of varying sizes (7 inches high-brightness) with optical coupling and advanced liquid cooling. Complemented by large-diameter hybrid lenses, such as F1.0 optics. Display dimensions range from 53 to 43 inches.